


Keep this sheet with the boiler instruction manual.

Display and control panel

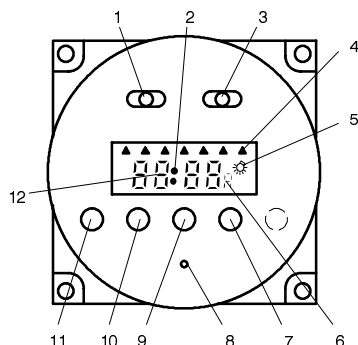

- 1 Mode selector switch
- 2 Timer operation indicator
- 3 Programming switch
- 4 Day indicator
- 5 Programme activation indicator
- 6 Programme number indicator
- 7 Minute setting button
- 8 Reset button
- 9 Hour setting button
- 10 Day of the week setting button
- 11 Programme advancing button
- 12 Time display

Setting the time

Push the programming switch 3 to the left. The timer operation indicator 2 (colon between the hour and minute display) will stop flashing and remain on.

Press the hour setting button 9 until the current hour appears on the display 12.

Press the minute setting button 7 until the current time appears on the display 12.

Push the program switch 3 back into the centre position. The display colon 2 will begin flashing, indicating that the timer is on.

Setting the day of the week

Push the programming switch 3 to the left. The timer operation indicator 2 (colon between the hour and minute display) will stop flashing and remain on.

Press the day setting 10 until the day indicator 4 shows the current day of the week (1=Monday, 2=Tuesday, 3=Wednesday...).

Push the programming switch 3 back into the centre position. The display colon 2 will begin flashing, indicating that the timer is on.

Selecting the mode

Note: hereafter, the term *controlled operation* refers to timer controlled operation which, on this boiler, coincide with the central heating operation.

The timer mode can be selected by using the function selector switch 1.

When the mode selector switch 1 is pushed to the **left**, controlled operation remains activated and will not be effected by the programme setting.

When the mode selector switch 1 is in the centre **position**, controlled operation is activated **according to the programme set**.

When the mode selector switch 1 is pushed to the **right**, controlled operation is **shut off** and will not be effected by the programme setting.

Programme setting

Eight separate time spans can be set over a 24 hour period in which controlled timer operation is activated.

Each period of time can be activated for no, one or more days of the week.

To programme the time periods, push the programming switch 3 to the right.

The timer operation indicator 2 will stop flashing and the activating time and day of the first period of time will be displayed. The programme activation indicator 5 will turn on and the number 1 will be visible on the programme number indicator 6.

The programmed time can be changed by pressing the hour setting button 9 and the minute setting button 7 until the time display 12 shows the desired time for controlled operation.

The programmed day can be changed by pressing the day of the week setting button 10 until the day indicator 4 shows the day (or days), on which the programmed time period(s) is/are activated.

The next time period can be programmed by pressing the programme advancing button 11; its number will be displayed on the programme number indicator 6. The previously programmed time period will be automatically set.

The odd numbered programme settings displayed on the programme number indicator 6 correspond to the

activating times (the programme activation indicator 5 will be turned on).

The even numbered programme settings displayed on the programme number indicator 6 correspond to the shut off times (the programme activation indicator 5 will be turned off).

When programming is finished, push the programming switch 3 back to the centre position. The time display 12 will once again show the current time and the timer operation indicator 2 will be flashing.

While programming is taking place, the clock continues to function.

Checking the programme

Push the programming switch 3 to the right. Each time the button is pressed, the day (or days) times and time period numbers will be displayed.

To change the programme, follow the instructions in the *programme setting* section.

After programming is completed, push the programming switch 3 back into the centre position.

Resetting

To completely reset the timer, press the reset button 8 with a pointed object (pencil).

CAUTION: Pushing the reset button 8 will completely erase the programmes set as well as all the data, including the current time and day.



