

This boiler is provided with a Time Switch which permits you to program the central heating cycle of the boiler during a 24 hour period.

Please note: the Time Switch operates the central heating cycle only. With the function switch in or "0" position the Time Switch doesn't run.

To enter the time

Turn the clock barrel "A" in clockwise direction until the indicator "B" corresponds with the current time showed on the barrel.

To enter the activity periods of the heating

Press in the areas ("C" in the figure) corresponding with the time in which the heating is requested. Any individual area corresponds to a 15 minutes time span.

Function selector

With the function selector "D", it is possible to select the function of the Time Switch without moving the pattern already selected.

With the selector in position "1" (left) the central heating function is switched on continuously and it is controlled only by the room thermostat (if fitted).

With the selector in position "0" (central) the central heating function is totally switched off.

With the selector in position  (right) the central heating function is switched on during the pattern set on the time switch.

