



Riva Plus He (M296) – Setting of Energy Performance.

Turn the Left hand DHW Dial to minimum position.

Turn the Right hand Summer/winter selector dial to the off position.

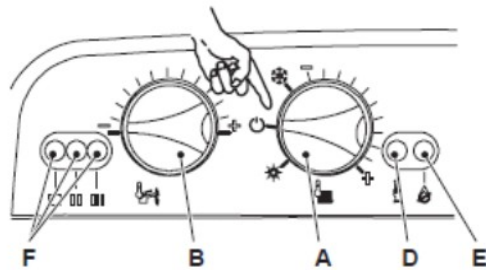


Disconnect **CH** temperature sensor .

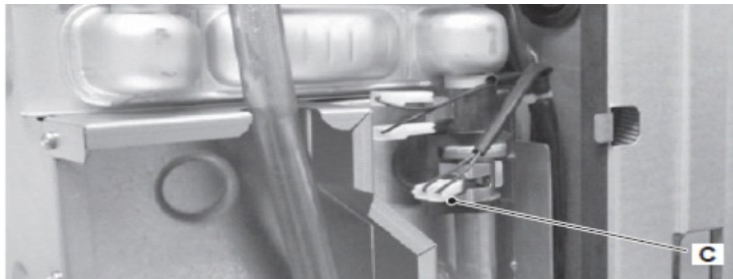

Press and hold lockout button **(D)** down for **10** seconds until the lockout light **(E)** starts to flash **once per second**

Re-connect the **CH** temperature sensor. You should now have the **left** hand green on solid

Press reset button until **all 3 Led lights** are **lit constantly**.

PM07			CAMPO REGOLAZ RISCALDAMENTO	1 = 38 - 85
				4 = 60 - 85
				7 = 38 - 45

Press and hold the lockout button **(D)** for **five** seconds and the Lamps **(F)** will flash corresponding to the setting below

To set for 38 – 85 degrees, turn the **DHW dial to 12 O'clock** position and then **back down to minimum** and the lockout light will start to flash (twice per second)

Press and hold lockout button **(D)** for **five seconds** and the lamps **(F)** will blink **simultaneously**

Press and hold the lockout button **(D)** for **five seconds** the Lamps **(F)** will flash to correspond to the setting (e.g. 1 or 2 flashes for 38-85 degrees)