


Resetting The Maintenance Period

Ensure all demand(s) have been turned off (no call for CH or DHW)

1, Press and hold "F" and "G" for 5 seconds until the display shows the code **P00**.

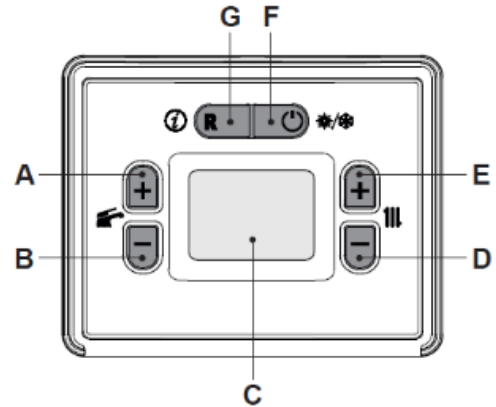


2, Using "A" or "B" scroll until the LCD display indicates **Cod** and then displays three dashes " - - -".

3, Press the "E" key to set "**2** - -", then press "A" to confirm the **2** and go to the next segment.

4, Press the "E" key to set "**2 7** -", then press "A" to confirm the **7** and go to the next segment.

5, Press the "E" key to set "**2 7 5**", then press "A" to confirm the **5** and go back to the list of parameters


6, Press "A" and hold until the LCD display shows the code **A51**, indicating entry into "parameter A51"

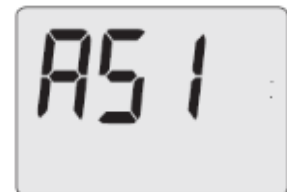

7, By using keys "D" or "E" modify the value from **1** to **52** weeks (**52** = 1 year).

8, Press "A" to confirm the value entered and return to the list of parameters.

9, Press "B" and hold until the LCD display shows the code **A50**, indicating entry into "parameter A50"

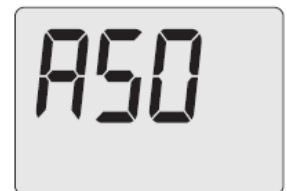

10 By using "D" or "E" it is possible to modify the value of parameter A51:

00 = maintenance period not activated

01 = maintenance period activated

11 Press "A" to confirm the value entered and return to the list of parameters

12 Press "F" key to exit "programming mode".

The service reminder is now reset for another 12 months