


Ensure all demand(s) have been turned off (no call for CH or DHW)

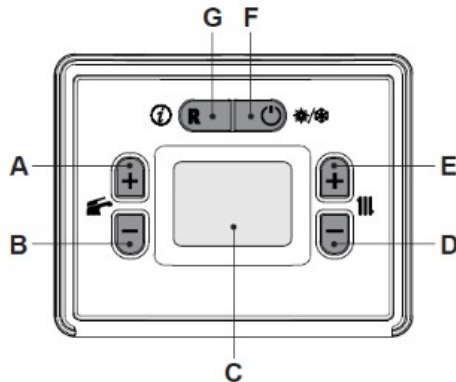

1) Press and hold G+F down for 3 seconds and let go...it will show P00



2) Using keys "A" or "B" scroll until the LCD display shows the code **P06**



3) Press E till the display shows the number **01**, indicating activation of the "chimney sweep function" at **Minimum** output. Press A to confirm the value entered and activate the function. Then open DHW tap @ a good flow rate



**NB)** To calibrate the boiler **CO2** (gas pressure at the burner) unscrew the protective brass cap completely and turn the underlying  $\varnothing$  4 mm hex head socket screw, Turn it clockwise to increase the **CO2**.

Model	Type gas	CO <sub>2</sub> % value (range)
DINA 25C DINA 30C DINA 35C	Natural (G20)	8.5 - 9.1
	Propane (G31)	9.4 - 10.0

4) Press E till the display shows the number **02**, indicating activation of the "chimney sweep function" at **Maximum** output. Press A to confirm the value entered and activate the function.



**NB)** If the value does not coincide, turn the maximum adjustment screw on the gas valve and calibrate the **CO2**. **If altering the CO2 at Maximum...The CO2 at the minimum must be checked.**

Model	Type gas	CO <sub>2</sub> % value (range)
DINA 25C DINA 30C DINA 35C	Natural (G20)	9.0 - 9.6
	Propane (G31)	10.2 - 10.8

5) To exit the chimney sweep function, reset parameter **P06** to **00** then press **A** to confirm then turn the boiler off by pressing "F" until the message **OFF** appears on the LCD display. Or power down for 10 secs. Before powering back on.

6) Please turn off the DHW Tap



**Factory Reset Gas Valve:**  
Anti-clockwise 2 and 3/4 turns.