
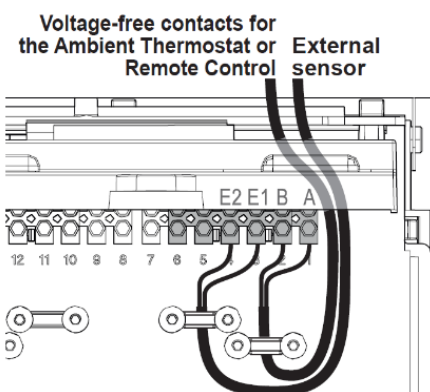
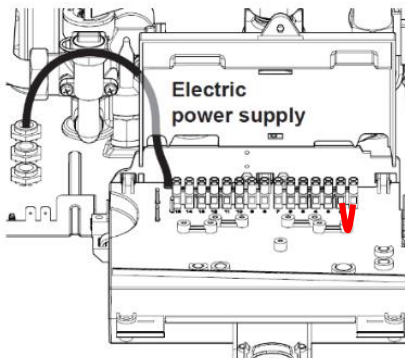


Warning: This is a **Voltage Free** external control connection. No power should be added to points A and B (A and B are for switching only)

Ensure all power has been isolated to the Appliance

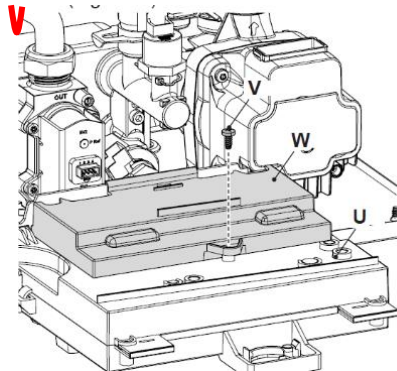


Unscrew "V" and lift the cover "W" to access the electric power supply terminal block, remote and external sensor

Remove the electric jumper present between "A and B" when connecting any type of ambient thermostat.

The electric cables of the ambient thermostat are inserted between clamps "A and B" (volt free connect).

If necessary utilise the appliance power supply to power your external control receiver connecting the cable via the spare terminal block provided keeping the same connections for the live (brown wire) neutral (blue wire) and Earth (Green/Yellow wire).

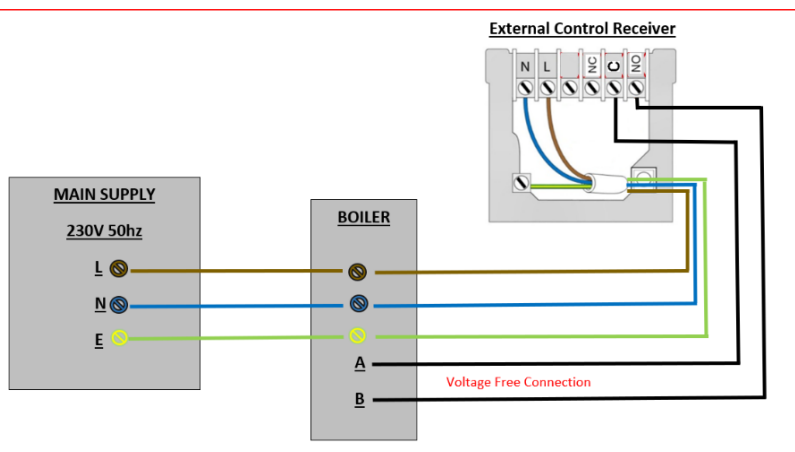

N.B: when there is a demand for CH, you will have continuity between C and NO (completing the circuit).