


Resetting The Maintenance Period

Ensure all demand(s) have been turned off (no call for CH or DHW)

- 1) Press and hold A+C down for 5 seconds until it shows HiS (History Log)

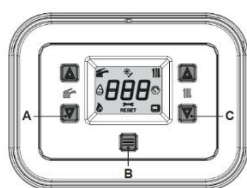

- 2) Press C once, the display shows Par (Parameters Menu), then press B to enter the menu



- 3) Press C to scroll to P34, press B to enter the parameter



- 4) Press C to scroll to 12 (indicating a 12-month reminder), press B for confirmation and it will display the following...



- 5) Press A and scroll to P30, then press B to enter
- 6) Using C scroll to 1 (reloads counter), press B to confirm and to show Ok
- 7) After 10 seconds switch the mains electricity supply OFF and ON

The service reminder is be reset for another 12 months