

4.3 Programming the maintenance period

- 1 To enter in the parameters setting mode press at the same time the 2 keys "F" and "G" (Figure 4.3) and hold in for 5 second until the display shows the code **P00**, indicating entry into "parameter P00" (Figure 4.4).

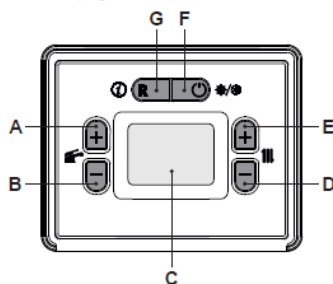


Figure 4.3



Figure 4.4

- 2 Scroll the various menus using keys "A" or "B" (Figure 4.3) until the LCD display indicates the letters **Cod** (Figure 4.5) and then displays three dashes "- - -".



Figure 4.5

- 3 Press the "E" key to set "1 - -", e suchthen press "A" to confirm the 1 and go to the next segment.
- 4 Press the "E" key to set "1 9 -", then press "A" to confirm the 9 and go to the next segment.
- 5 Press the "E" key to set "1 9 8", then press "A" to confirm the 8 and go back to the list of parameters
- 6 Press "A" and hold until the LCD display shows the code **A51**, indicating entry into "parameter A51" (Figure 4.6).



Figure 4.6

- 7 By using keys "D" or "E" (Figure 4.3) it is possible to modify the value of parameter A51 from 1 to 52 weeks (52 = 1 year).
- 8 Press "A" or "B" (Figure 4.3) to confirm the value entered and return to the list of parameters (Figure 4.6).
- 9 Press "B" and hold until the LCD display shows the code **A50**, indicating entry into "parameter A50" (Figure 4.7).

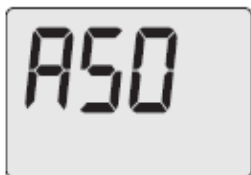


Figure 4.7

- 10 By using keys "D" or "E" (Figure 4.3) it is possible to modify the value of parameter A51:
00 = Maintenance period not activated
01 = Maintenance period activated
- 11 Press "A" or "B" (Figure 4.3) to confirm the value entered and return to the list of parameters (Figure 4.7).
- 12 Press the "F" key (Figure 4.3) to exit "programming mode".