

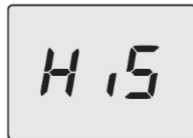


Ensure all demand(s) have been turned off (no call for CH or DHW)

1) Press and hold A+C down for 5 seconds until it shows HiS (History Log)

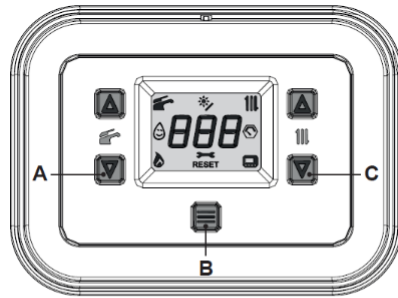

2) Press C twice to scroll to ChS (Chimney sweep menu), then press B to enter the menu, LP (Minimum for DHW) will appear...turn the DHW tap on at a good flow rate.

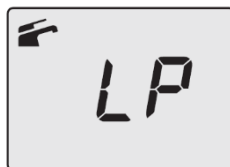

min - max)			10'e
CO2 content with gas G31 (range	%		8'e -
min - max)			
CO2 content with gas G50 (range	%		8'e - 8'e

3) Press C to scroll to DP (Maximum for DHW)



CO2 content with gas G20 (range	%	8,5 - 9,5
min - max)		
CO2 content with gas G31 (range	%	9,6 -
min - max)		10,6

4) The maximum Co2% should be in the range shown above with a tolerance of 0.2%, to exit the programme press A + C for 5 seconds to return to the main menu.

**N.B:** If the Co2% is out of tolerances, exit programming by pressing A + C for 5 seconds...check if the gas supply is adequate and carry out the "Automatic calibration of the gas valve"